



# easyToilet

The on-site inflatable toilet:

Easy to transport, comfortable to use



easy TOILET

easy TOILET

## ‘Is it still possible to hold it in or does one have to do their business around the next corner?’


Unfortunately, the lack of sanitary facilities during longer mission often confronts emergency services with such a choice. **Is that still up to date? - No. Quite simply.** It is a completely avoidable, unnecessary burden for emergency services.

The easyToilet shows what a real alternative looks like: Quickly assembled, sight- and weatherproof, a low maintenance, odorless dry toilet.

### **The most important features:**

- ▶ Small pack size, can be carried by one person
- ▶ Quickly inflated using the included pump
- ▶ Secure stand thanks to integrated base plates and tiedown materials
- ▶ Airtight and removable disposal system, one bag of absorbent per toilet visit
- ▶ Integrated ventilation nets for circulation
- ▶ Non-see-through and weatherproof material, certified to fire protection class B1 (DIN 4102-1)
- ▶ Spacious interior allows use in heavy duty protection gear
- ▶ Integrated storage compartments for equipment such as gloves, masks, etc.

# Inflated in 40 seconds – ready to use in 2 minutes






Length: 0.72m (~2' 3½")  
Width: 0.5m (~1' 7½")  
Height: 0.44m (~1' 3¾")



Length: 1.10m (~3' 7½")  
Width: 1.04m (~3' 5")  
Height: 2.10m (~6' 11")

With a total weight of 17 kg (~37 lbs),  
the easyToilet can be easily carried  
and assembled by just one person.

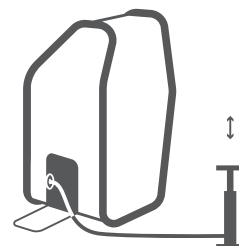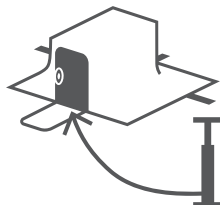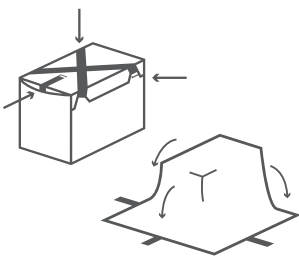

It can be that simple:

Open the straps of the complete package,  
then remove the enclosed pump from the  
rear compartment and inflate the outer  
shell of the easyToilet.

The actual toilet bowl is already inside the  
stall. Then remove the toilet paper and  
disposal bag from the rear compartment  
and store them in the stall.

The easyToilet is now ready for use.



easy  
TOILET



A collection bag is inserted into the dry toilet before each visit to the toilet. (see illustration on the right) The actual toilet seat thus serves as a holder for the easyToilet disposal bags.

As one bag is used for each visit to the toilet, there is no need for time-consuming cleaning of the system.

The aluminum base offers sufficient storage space for the air pump, disposal bag, toilet paper and tie down material.

# Quick and hygienic cleaning - odor-free



A disposal bag is placed in the easyToilet housing before use. The integrated plastic rim of the bag provides a secure hold. Now just empty a binder packet into the toilet.



After use, seal the bag airtight with the included lid. The snap seal prevents unintentional opening. The bag can then be easily disposed of using the handle.



## Scope of supply

- 1 easyToilet pneumatic tent with composite floor
- 1 dry toilet
- 1 double-stroke hand pump
- 1 aluminum toilet base
- 5 bags with lid and binding agent
- 8 pegs for tie down
- 4 tensioning ropes

# Other products from our portfolio



## Vario-Load-Series

Modularly configurable load carriers -  
Equipped for every application



## Trolley ramps

Easily overcome obstacles  
in the urban space



## VenturiPulse

Effectively aerate stagnant water with  
the Venturi effect

Our website



### inventied GmbH

Industriegebiet Kreuzwiese 11  
67806 Rockenhausen  
Germany  
T +49 1590 61 950 03  
info@inventied.de  
www.inventied.de

